


**allen + roth™**  
a backdrop for living™

# MAZON CEILING FAN

MODEL #3MVR44BSD

UL MODEL #AC-344LF8200H

Español p. 16

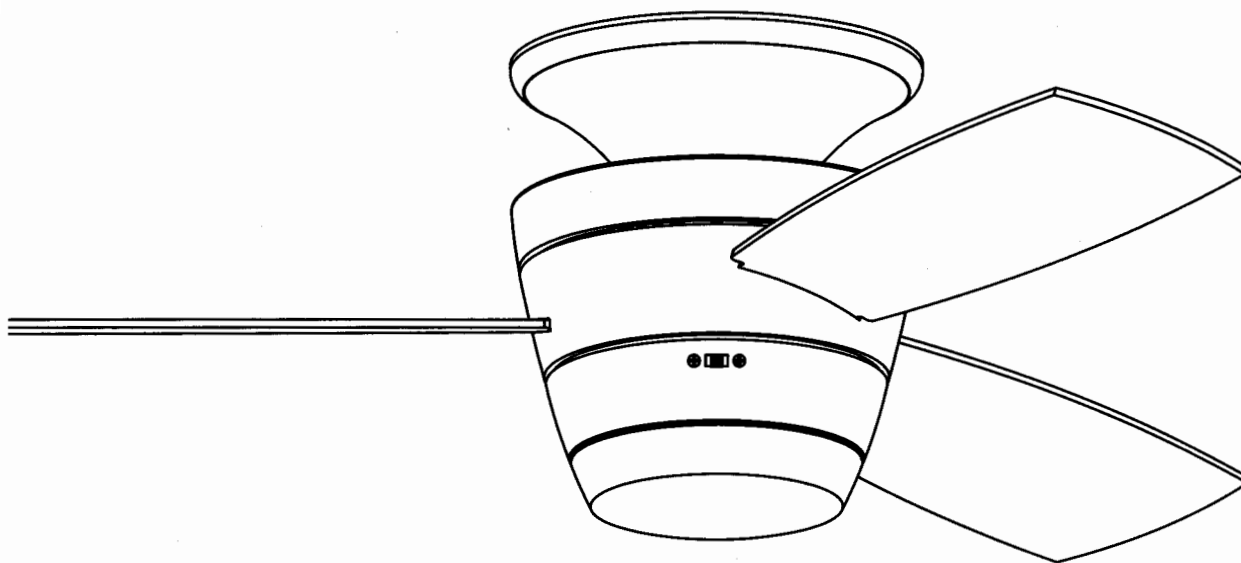**ATTACH YOUR RECEIPT HERE**

Serial Number \_\_\_\_\_ Purchase Date \_\_\_\_\_



**Questions, problems, missing parts?** Before returning to your retailer, call our customer service department at 1-866-439-9800, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

Safety Information .....	2
Package Contents .....	4
Hardware Contents .....	5
Preparation .....	6
Assembly Instructions .....	7
Operation Instructions .....	12
Care and Maintenance .....	13
Troubleshooting .....	14
Warranty .....	15
Replacement Parts List .....	15

**SAFETY INFORMATION****READ AND SAVE THESE INSTRUCTIONS**

Please read and understand this entire manual before attempting to assemble, operate or install the product. If you have any questions regarding the product, please call customer service at 1-866-439-9800, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

- Installation work and electrical wiring must be done by qualified person(s) in accordance with applicable codes and standards (ANSI/NFPA 70-1999), including fire-rated construction.
- Before you begin installing the fan, servicing or cleaning unit, switch power off at service panel and lock service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.
- Use this unit only in the manner intended by the manufacturer. If you have any questions contact customer service center.
- Make sure the installation site you choose allows the fan blades to rotate without any obstructions. Allow a minimum clearance of 7 ft. from the floor to the trailing edge of the blade.
- Never place a switch where it can be reached from a tub or shower.
- If this unit is to be installed over a tub or shower, it must be marked as appropriate for the application.
- The combustion airflow needed for safe operation of fuel-burning equipment may be affected by this unit's operation. Follow the heating equipment manufacturer's guideline safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE) and the local code authorities.
- To reduce the risk of electric shock, disconnect the electrical supply circuit to the fan before installing the light kit.
- All set screws must be checked and tightened where necessary before installation.
- The net weight of this fan with light kit is: 15.25 lbs. (6.93 kg).



## SAFETY INFORMATION

### WARNING



#### **ELECTRIC SHOCK HAZARD**

To reduce the risk of electric shock, do not use this fan with any solid-state speed control device.

### WARNING



#### **SHOCK HAZARD**

To reduce the risk of shock, this fan must be installed with an isolation wall control/switch.

### WARNING



#### **ELECTRIC SHOCK HAZARD**

To reduce the risk of electric shock, make sure electricity has been turned off at the circuit breaker or fuse box before beginning installation.

### WARNING



#### **PERSONAL INJURY HAZARD**

To reduce the risk of personal injury, do not bend the blade brackets when installing the brackets, balancing the blades, or cleaning the fan. Do not insert foreign objects in between rotating fan blades.

### WARNING



#### **FIRE, ELECTRICAL SHOCK OR PERSONAL INJURY HAZARD**

To reduce the risk of fire, electric shock, or personal injury, mount to outlet box marked "ACCEPTABLE FOR FAN SUPPORT," (Mounting must support at least 35 lbs.) and use mounting screws provided with the outlet box. Most outlet boxes commonly used for the support of lighting fixtures are not acceptable for fan support and may need to be replaced. Consult a qualified electrician if in doubt.

### WARNING



#### **FIRE, ELECTRICAL SHOCK OR PERSONAL INJURY HAZARD**

 
When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.

## CAUTION


#### **PERSONAL INJURY HAZARD**

To reduce the risk of injury to persons, install fan so that the blade is at least 7 ft. (2.1 m) above the floor.


# PACKAGE CONTENTS




A

 

B

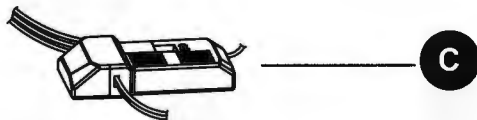


C

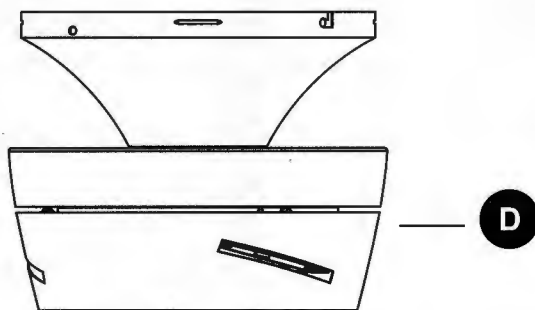

D



 E



F




G



H



I

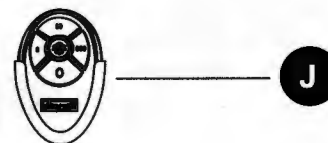

J

PART	DESCRIPTION	QUANTITY
A	Mounting plate	1
B	Decorative ring	1
C	Remote control receiver	1
D	Motor assembly	1
E	Blade	3
F	Light fixture	1
G	Internal light fixture	1
H	Glass	1
I	Bulb	1
J	Remote control transmitter	1

**HARDWARE CONTENTS** (shown actual size)

AA




Blade screws  
Qty. 12

BB




Fiber washer  
Qty. 12

CC

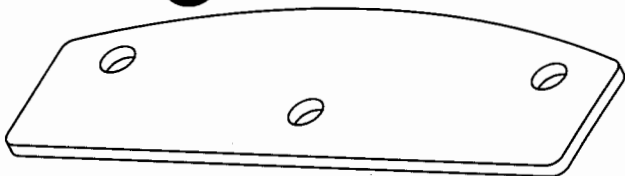

Enhance plate  
Qty. 3

DD

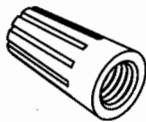

Wire connector  
Qty. 3

EE



Extra flat washer  
Qty. 2

FF




Extra spring washer  
Qty. 2

GG



Extra Wood screw  
Qty. 2

HH

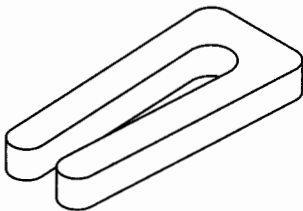

Balance clip  
Qty. 1

II



Balance weight  
Qty. 3

JJ



Extra light fixture  
screw  
Qty. 1

KK



Extra canopy mounting  
screw  
Qty. 1

LL



Extra screw  
(For internal light fixture  
installation)  
Qty. 1

MM



Battery  
Qty. 1

**Note:**

- Extra hardware EE, FF and GG should be used in step 1 in the assembly instructions if they are needed.
- Extra hardware JJ should be used in step 12 in the assembly instructions if it is needed.
- Extra hardware KK should be used in step 8 in the assembly instructions if it is needed.
- Extra hardware LL should be used in step 14 in the assembly instructions if it is needed.

## PREPARATION

---

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.


**Estimated Assembly Time: 30 minutes**

Tools Required for Assembly (not included): Phillips screwdriver, step ladder, electrical tape, pliers, wire cutter, wire stripper.


**WARNING:** Before starting assembly of this product, please disconnect power to area and familiarize yourself with the safety information provided on page 2 and 3.

# ASSEMBLY INSTRUCTIONS


1. Install mounting plate (A) to outlet box (not included). Use only the screws (not included) provided with the outlet box.

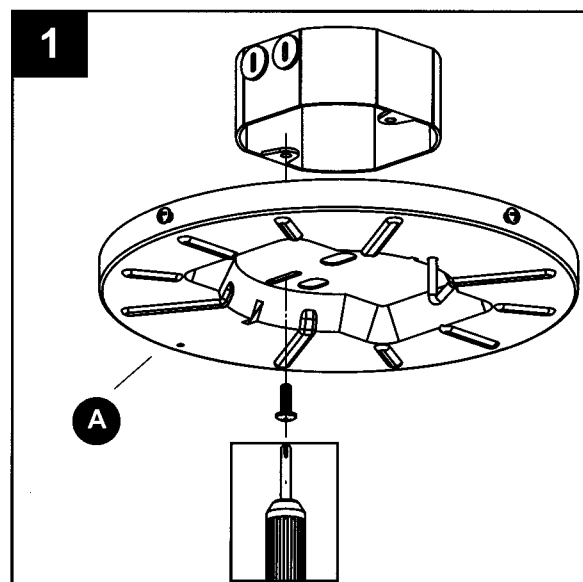

2. Place decorative ring (B) over canopy on motor assembly (D).

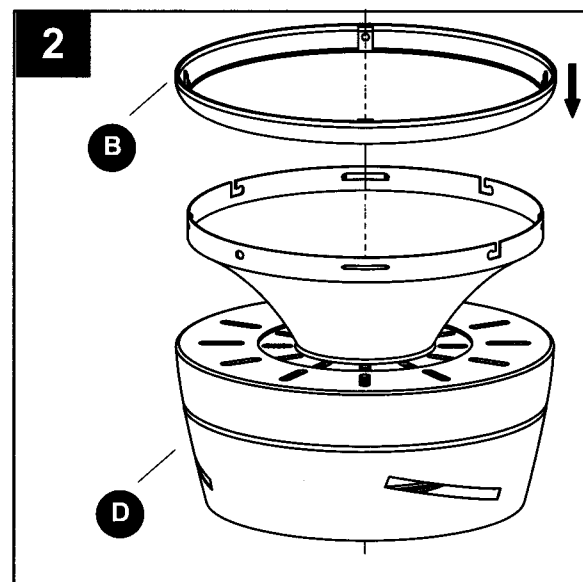


3. Set dip switches on the remote control transmitter (J) and remote control receiver (C) to the same setting. This must be done so the units will communicate properly. If you have other fans you can set them to be controlled by one transmitter by setting both receivers the same as transmitter. If you have more than one fan with a remote control, you can set the dip switches to different positions to have separate control.

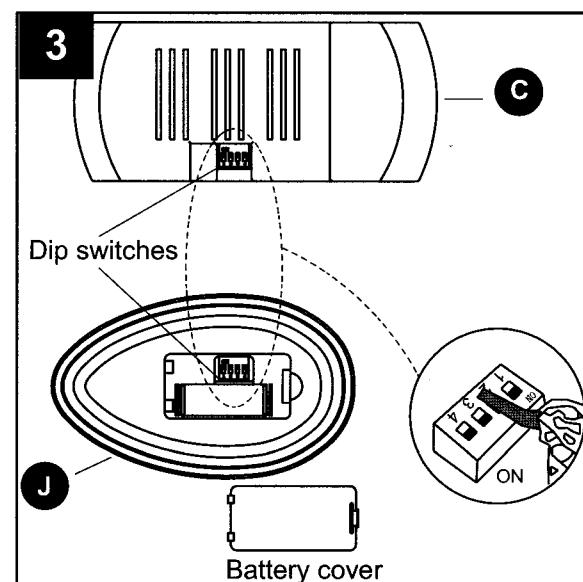


# ASSEMBLY INSTRUCTIONS


4. Loosen two preassembled screws across from each other and remove the other two screws from mounting plate (A). Keep screws for later use.  
Hang motor assembly (D) onto mounting plate (A) by the hand-free hook with a closed hole on the canopy of motor assembly (D).

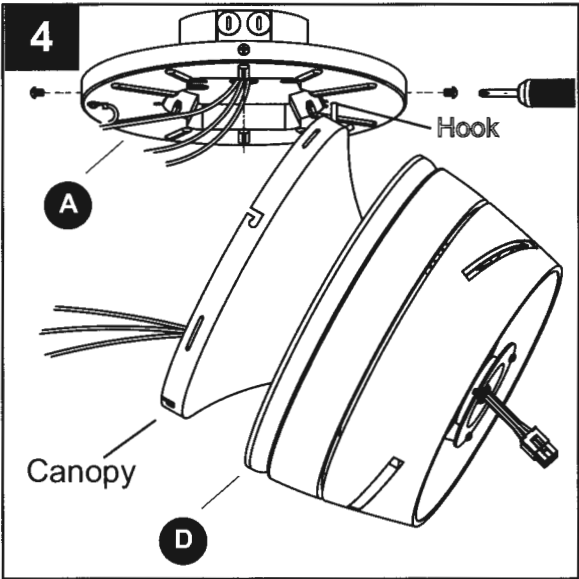

5. Make wire connections as in the wiring diagram.  
Connect **WHITE** wire from motor assembly (D) to **WHITE** wire from remote control receiver (C) marked TO MOTOR N, **BLUE** wire from motor assembly (D) to **BLUE** wire from remote control receiver (C) marked FOR LIGHT. Connect **BLACK** wire from motor assembly (D) to **BLACK** wire from remote control receiver (C) marked TO MOTOR L. Connect **BLACK (Live)** wire from house to **BLACK** wire from remote control receiver (C) marked AC IN L. Connect **WHITE (Neutral)** wire from house to **WHITE** wire from remote control receiver (C) marked AC IN N. Connect **GROUND LEAD (Green)** from mounting plate (A) to **GROUND LEAD** from house.

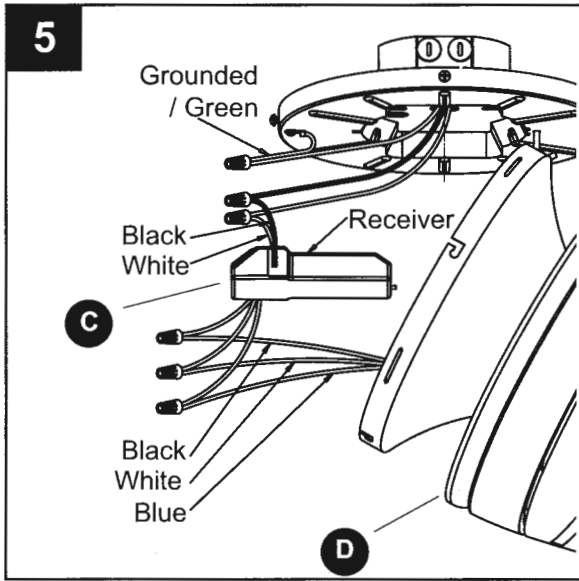

6. To connect wires, put wire ends together and screw wire with wire connector (DD) in a clockwise direction. Tape the wire connector (DD) and wires together. Make sure that no filiments are outside of the wire connectors (DD). After making the wire connections, the wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box and ungrounded conductor on the other side of the outlet box. The splices after being made should be turned upward and pushed carefully up into the outlet box.

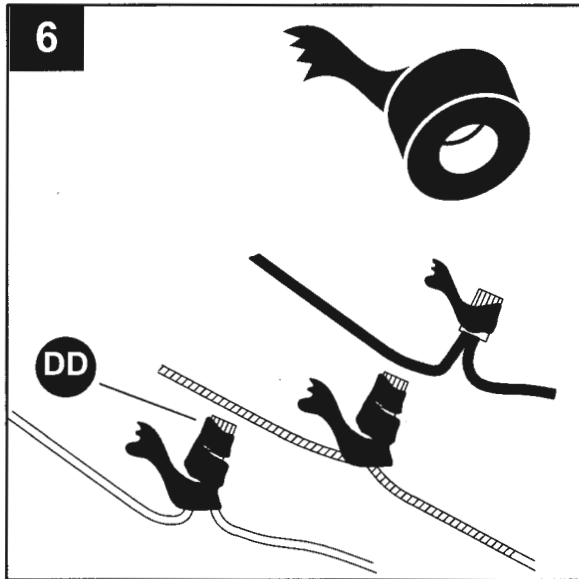


## Hardware Used

**DD** Wire connector x 3




# ASSEMBLY INSTRUCTIONS


7. After wire connections, attach remote control receiver (C) onto the canopy on motor assembly (D) by preadhered double-sided foam tape as shown.

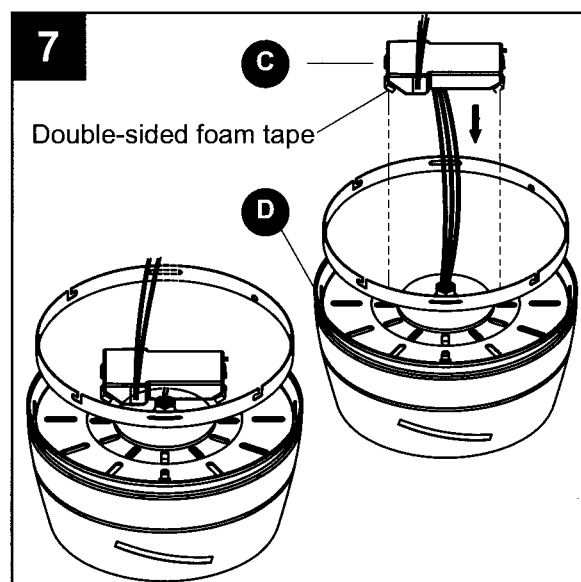

8. Lift motor assembly (D) up, aligning keyhole slots on canopy of motor assembly (D) with preassembled screws on mounting plate (A). Install the screws removed in step 4. Tighten all screws securely.

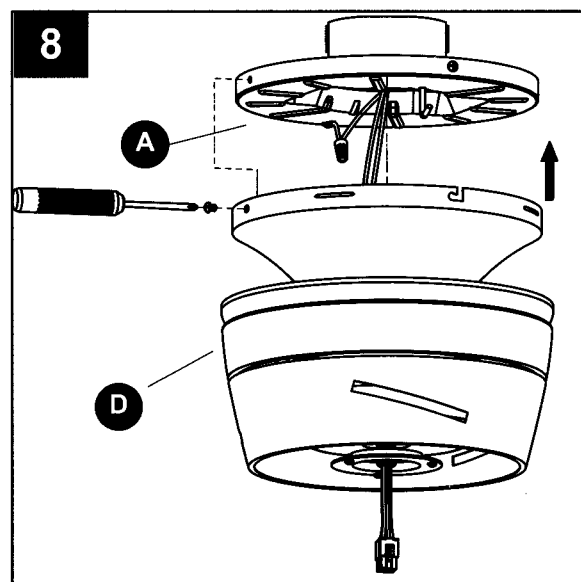

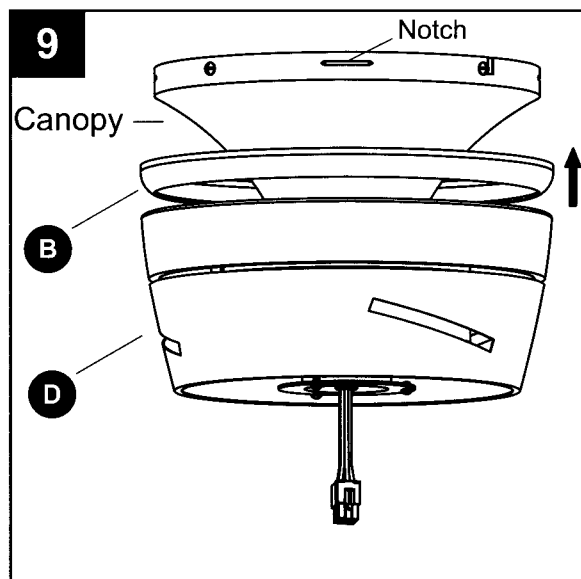


9. Lift the decorative ring (B) up, aligning notches on canopy of motor assembly (D) with raised areas on inside of decorative ring (B) and pop it onto the canopy.




10. Insert blade (E) into the slot on motor assembly (D) and install blade screws (AA) and fiber washers (BB) with enhance plate (CC) aligning each of the holes as shown. Repeat this process for remaining blades.


Note: Make sure the side with a label "This side up" is installed upward.

## Hardware Used


<b>AA</b>	Blade screw		x 9
<b>BB</b>	Fiber washer		x 9
<b>CC</b>	Enhance plate		x 3

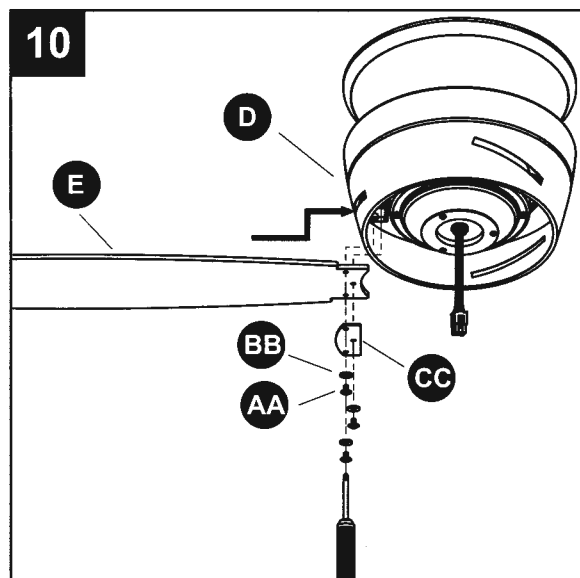


11. Loosen two and remove one preassembled screw from plate on motor assembly (D).

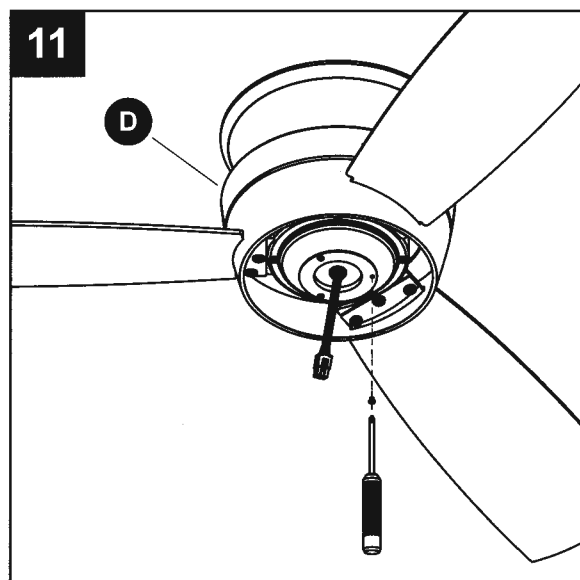


12. Connect plug from fan to plug from light fixture (F). Make sure plugs are connected securely. Attach the light fixture (F) onto plate on motor assembly (D) by aligning its keyhole slots with preassembled screws on the plate and twist to lock. Re-install the screw removed in step 11. Tighten all screws securely.

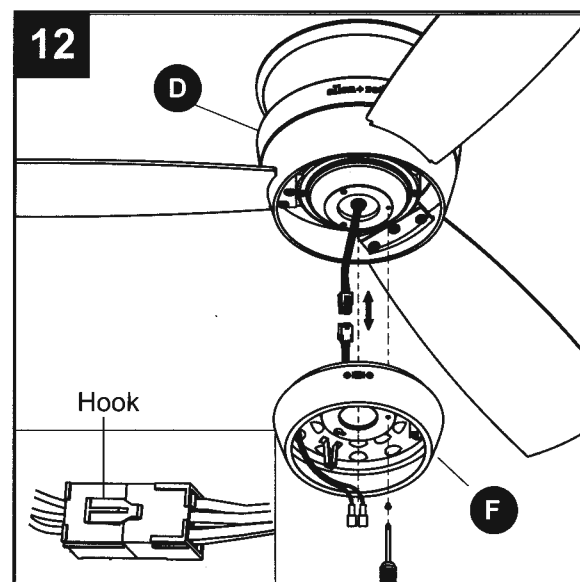

13. Loosen two and remove one preassembled screw from light plate in light fixture (F). Save screw for later use.

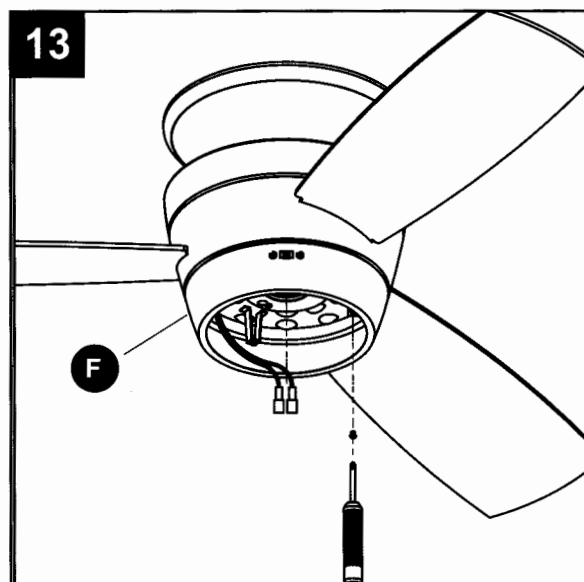


14. Connect white wire from light fixture (F) to white wire from internal light pan (G). Connect blue wire from light fixture (F) to black wire from internal light fixture (G). Install internal light fixture (G) to light fixture (F) by aligning its keyhole slots with the preassembled screws on the light fixture (F) and twist to lock. Re-install the screw removed in step 13 and tighten all screws securely.

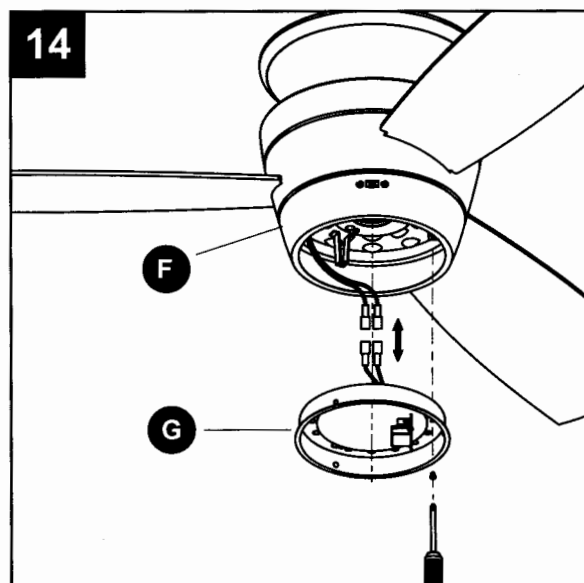

15. Install bulb (I). Attach glass (H) by aligning dimples in internal light fixture (G) with the grooves in glass (H) and twist clockwise until tight.

**WARNING:** This item used one (1) 75-watt JDE11 base halogen bulb. Exceeding the maximum wattage of this item will result in the fan light shutting down until the proper wattage of bulbs are installed. Reset the light by turning off, replacing bulbs with the correct wattage and turning the power back.

**Note:** Do not replace bulb until it cools down.

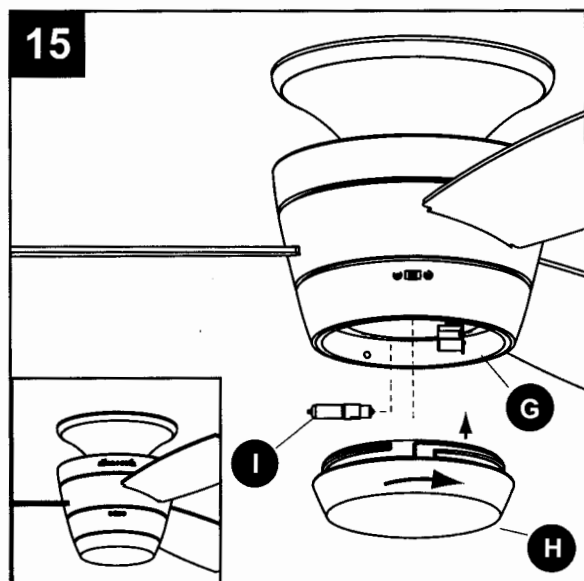

## OPERATION INSTRUCTIONS

Turn on the power and check operation of fan.



Speed settings for warm or cool weather depend on factors such as room size, ceiling height and number of fans.

The slide switch controls direction, forward (left) or reverse (right).

**Note:** Turn off and wait for fan to stop before changing the setting of forward/reverse function.

**Warm weather - (Forward)** Fan turns in a counterclockwise direction. A downward air flow creates a cooling effect as shown in Illustration A of figure 2. This allows you to set your air conditioner on higher temperature settings without affecting your comfort.

**Cool weather - (Reverse)** Fan turns in a clockwise direction. An upward air flow moves warm air off the ceiling area as shown in Illustration B of figure 2. This allows you to set your heating unit on lower settings without affecting your comfort.

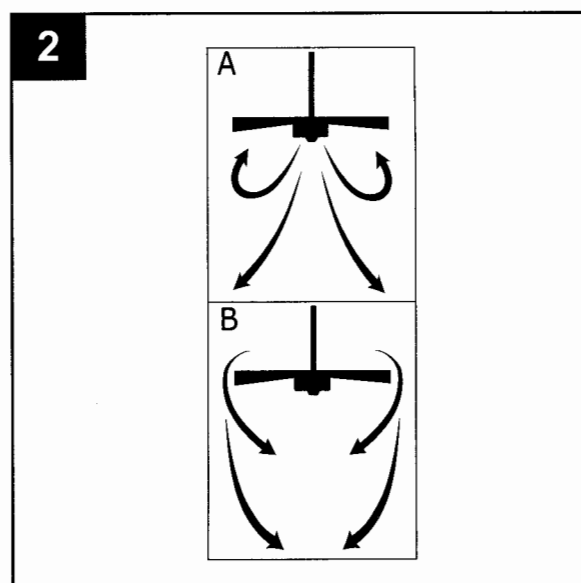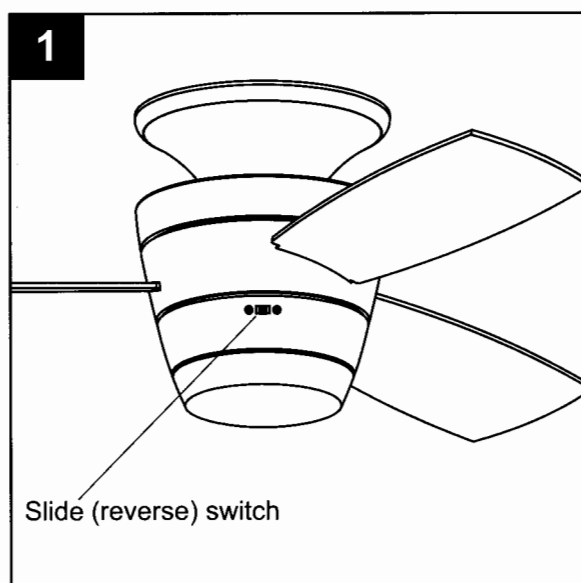


## REMOTE CONTROL TRANSMITTER

1. Remove the battery cover from the remote control transmitter (J), and install battery (MM). Replace the cover.

**Note:** Use 12-volt battery to replace battery (MM).

2. The buttons on remote control transmitter (J) control the fan speed and light as follows.

- 0 Low speed
- 00 Medium speed
- 000 High speed
- Turn the fan off
- ☀ Press light key quickly to turn light on or off. Press and hold the button to dim the light. The light will cycle from bright to dim to bright until button is released. Light will maintain last setting if turned off.

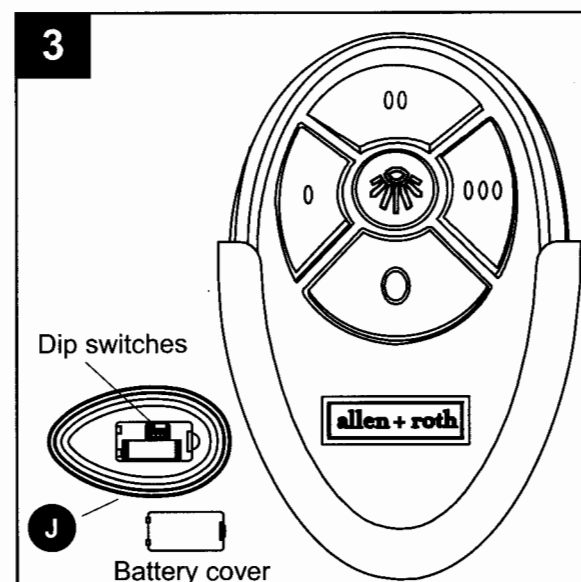

## CARE AND MAINTENANCE

---

**Important:** Shut off main power supply before beginning any maintenance.

- Because of the fan's natural movement, some connections may become loose. Check the support connections, brackets and blade attachments twice a year. Make sure they are secure.
- Clean your fan periodically to help maintain its new appearance for years. Do not use water while cleaning. This could damage the motor, or the wood, or possibly cause electrical shock.
- Use only a soft brush or lint-free cloth to avoid scratching the finish. The plating is sealed with a lacquer coating to minimize discoloration or tarnishing.
- There is no need to oil your fan. The motor has permanently lubricated bearings.

## TROUBLESHOOTING

If you have any questions regarding the product, please call customer service at 1-866-439-9800, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Fan does not start	<ol style="list-style-type: none"> <li>1. Power is off.</li> <li>2. Pull chain switch is off.</li> <li>3. Reverse switch does not engage.</li> <li>4. Faulty wire connection.</li> <li>5. Out of battery (Transmitter).</li> <li>6. Dip switches does not match.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check main and branch fuses or circuit breakers.</li> <li>2. Pull the pull chain switch.</li> <li>3. Push the switch firmly either way.</li> <li>4. Turn power off and check all wire connections.</li> <li>5. Replace battery.</li> <li>6. Check dip switches setting.</li> </ol>
Fan sounds noise	<ol style="list-style-type: none"> <li>1. Set screws are loose.</li> <li>2. Faulty light bulb installation.</li> <li>3. Glass is not secure.</li> <li>4. Unapproved speed control.</li> </ol>	<ol style="list-style-type: none"> <li>1. Tighten all set screws.</li> <li>2. Check to be sure light bulb is tight in cocket and not touch on glass shade.</li> <li>3. Secure the glass.</li> <li>4. Replace with an approved speed controller.</li> </ol>
Excessive wobbling	<ol style="list-style-type: none"> <li>1. Blades or blade holders are loose.</li> <li>2. Unbalanced blades.</li> <li>3. Mounting bracket is not secure.</li> <li>4. Set screws on yoke are not secure.</li> <li>5. Downrod ball does not engage.</li> <li>6. Fan too close to vaulted ceiling.</li> </ol>	<ol style="list-style-type: none"> <li>1. Tighten all set screws of blades and blade holders.</li> <li>2. Switch blade with a blade from the opposite side.</li> <li>3. Turn power off. Loosen canopy and make sure that mounting bracket is secure.</li> <li>4. Tighten the set screws.</li> <li>5. Make sure that the ridge on mounting bracket engages the notch in the downrod ball.</li> <li>6. Use longer downrod or move it to other locations.</li> </ol>
Light does not work	<ol style="list-style-type: none"> <li>1. Faulty wire connection.</li> <li>2. Faulty plug connection.</li> <li>3. Faulty light bulbs.</li> <li>4. Bulbs does not install well.</li> <li>5. Over lamping and result in the light shut down.</li> <li>6. Out of battery (Transmitter).</li> <li>7. Dip switches does not match.</li> </ol>	<ol style="list-style-type: none"> <li>1. Turn power off and check all wire connections.</li> <li>2. Remove light kit and check plug connection.</li> <li>3. Replace bulbs.</li> <li>4. Turn power off. Reinstall bulbs.</li> <li>5. Turn power off and replace with correct bulbs. Turn power on.</li> <li>6. Replace battery.</li> <li>7. Check dip switch setting.</li> </ol>

## WARRANTY

The manufacturer warrants this fan to be free from defects in workmanship and material present at time of shipment from the factory for lifetime limited from the date of purchase. This warranty applies only to the original purchaser. The manufacturer agrees to correct such defect at no charge or at our option replace the ceiling fan with a comparable or superior model.

To obtain warranty service, present a copy of your sales receipt as proof of purchase. All cost of removal and reinstallation are the expressed responsibility of the purchaser. Any damage to the ceiling fan by accident, misuse or improper installation, or by affixing accessories not produced by this the manufacturer of the fan, are at the purchaser's own responsibility. The manufacturer assumes no responsibility whatsoever for fan installation during the lifetime limited warranty. Any service performed by an unauthorized person will render the warranty invalid.

Due to varying climatic conditions, this warranty does not cover changes in brass finish, rusting, pitting, tarnishing, corroding or peeling. Brass finish fans maintain their beauty when protected from varying weather conditions. Any glass provided with this fan is not covered by the warranty.


Any replacement of defective parts for the ceiling fan must be reported within the first year from the date of purchase. For the balance of the warranty, call our customer service department at 1-866-439-9800 for return authorization and shipping instructions so that we may repair or replace the ceiling fan. Any fan or parts returned improperly packaged is the sole responsibility of the purchaser. There is no further expressed warranty. The manufacturer disclaims any and all implied warranties.

The duration of any implied warranty which can not be disclaimed is limited to the lifetime limited period as specified in our warranty. The manufacturer shall not be liable for incidental, consequential or special damages arising at or in connection with product use or performance except as may otherwise be accorded by law. This warranty gives you specific legal rights and you also have other rights which vary from state to state. This warranty supersedes all prior warranties. Note: A small amount of "wobble" is normal and should not be considered a defect.

## REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-866-439-9800, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PART	DESCRIPTION	PART #
A	Mounting plate	101240
B	decorative ring	108319
C	Remote control receiver	100071
E	Blade	131919
F	Light fixture	133568
G	Internal light fixture	133569
H	Glass	G635
I	Bulb	160010
J	Remote control transmitter	100072
AA-MM	Hardware pack	102749

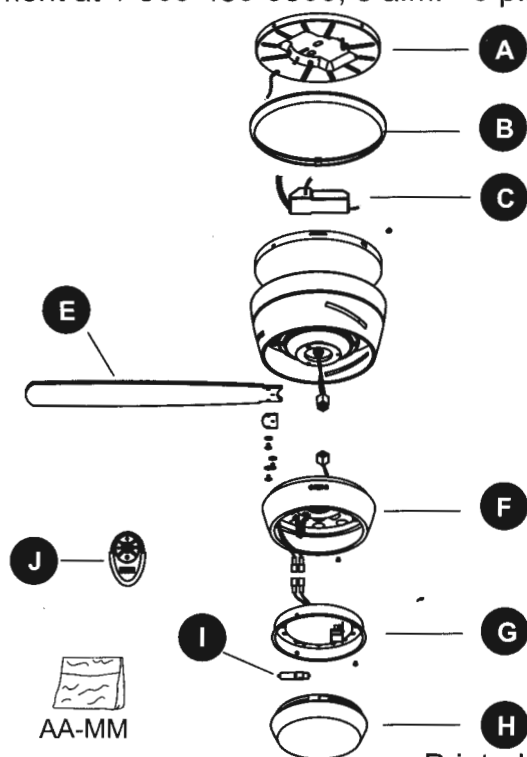

Printed in China